


Model 410 Mk4



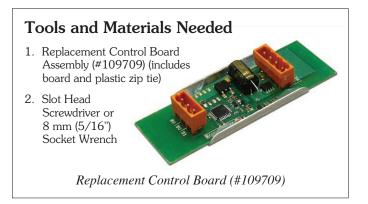


Model 410 Mk4 Peristaltic Pump (#112981)

Instructions


- 1. Disconnect the Pump from the power supply.
- 2. Remove the four screws from the End Plate (opposite end from Pump Head).

Control Board

3. Carefully slide the old Control Board out of the enclosure.

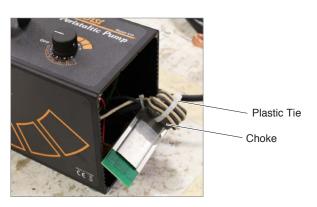

- 4. Slide the Control Board from the plastic tie around the Choke, or cut the plastic tie if required.
- 5. Unplug the 4-Pin and 3-Pin Plugs from the Control Board by pressing the sides and pulling out from the Board.

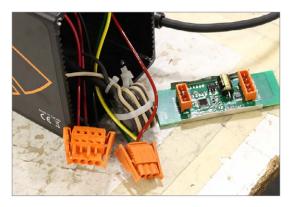

- 6. Slide the end of the new Control Board with the 3-Pin Plug (plugs facing down) through the plastic tie, or if cut in the previous step, use the new plastic zip tie to secure the Board back to the Choke.
- 7. Plug the 3-Pin Plug and 4-Pin Plug into the new Control Board. The plugs are polarized so there is no risk of reverse polarity.
- 8. Slide the new Control Board into the enclosure in the slots, plugs facing down.
- 9. Carefully push all wires into the housing and screw the End Plate back on the Pump.

